Pirate Ships were usually armed private vessels commissioned by one country with letters of marque commissions granted to ship owners allowing attacks on an enemy nation's war ships or commerce. Many privateer ships did not hold with attacking only enemy ships of one country, once set out to sea they would attack any ship sighted, even those of friendly nations. Seaman serving on pirate ships were not paid in regular wages, but in shares of the loot taken from ships they had attacked. The greater the number of ships attacked the more loot to be divided among the pirates.

SCALE: 1"=11'1"



KIT NO. 70874

CRAFT HOUSE CORPORATION, Toledo, Ohio 43607 . A RPITI COMPANY

THIS IS HOW YOUR MODEL WILL LOOK WHEN FINISHED, NOTE: WOOD BASE IS NOT INCLUDED. CUT WOOD BASE TO SHAPE AND STAIN MAHOGANY.



CERTAINS PRODUITE CONTIENNENT DES PIÈCES DE PETITE DIMENSION QUI NE CONVIENT PAS A UN ENIANT DE MOINS DE 36 MOIS.

PRODOTTO NON ADATTO ALBAMBINI DI ETA INTERIORE AL 16 MESI. CONTIENE PICOLLO OGGETTI.

KAN GENARE OPLEVEREN VOOR KINDEREN TOT 1 PAAR BEVIT KLEINE DINDERDELEN.

ATENCION: NO ES CONVENENTE PARA NIÑOS MENORES DE 1 AÑOS. CONTIENE PIEZAS PEQUEÑAS.

HPOΣΟΧΗ: ΔΕΝ ΕΙΝΑΙ ΚΑΤΑΛΑΙΙΑ ΓΙΑ HALMA ΚΑΤΌ ΤΩΝ ΤΡΙΏΝ ΕΤΏΝ ΠΕΡΙΕΧΕΙ ΜΙΚΡΑ ΤΕΜΑΧΙΑ.



FAMOUS THE WORLD OVER

Before Assembling Model Read Notes Below

All parts are numbered or have numbers on tabs next to the parts. These numbers match the numbers in the assembly steps.

CRAFT HOUSE CORPORATION, Toledo, Ohio 43607 • An IPPT Company

IMPORTANT:

DO NOT BREAK PARTS OFF THE RUNNERS UNTIL READY TO USE PARTS IN ASSEMBLING THE MODEL. MANY SMALL PARTS HAVE THE NUMBERS ON TABS NEXT TO THE PART AND IF BROKEN OFF BEFORE ASSEMBLY MAY BECOME HARD TO IDENTIFY.

MOVABLE DOORS 22D


Trim any excess plastic from the parts for best fit when assembling your model.


PAINTING PARTS: NOTE—Parts to be painted can be painted before assembly. See step photos for colors to be used. Use paints for plastics only. Paint crew members as desired and cement them onto the model.


* INDICATES THE COLOR PARTS ARE TO BE PAINTED

may be cemented in place if desired. Now slip part 24H onto part 23H then place parts 25D onto ends of 23H and cement assembly to deck. Next cement

parts 92D, 93D and 94D onto the deck.

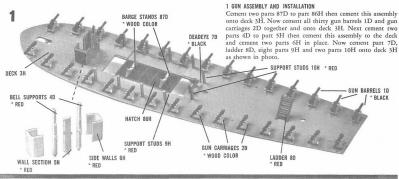

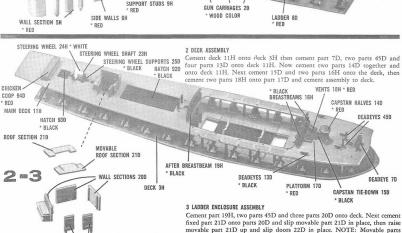

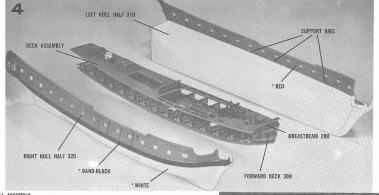



4 HULL ASSEMBLY


Cement part 29H and part 30H together and onto the deck assembly. Next cement the deck assembly into hull half 31D and 32D together. NOTE: Deck assembly must rest on top of the locating ribs in the hull halves. Rubber bands, tape or spring type clothes pins may be used to hold hull halves together till cement drys.


5 FINAL BOW ASSEMBLY

Insert two doors 33H in place then cement two parts 34H (left and right) and part 35H to the bow section. Now cement part 36D, two parts 74H, two parts 37H and two parts 38H in place. Next cement two parts 13D onto parts 74H, then cement two ladders 75D in place.

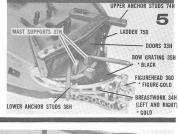

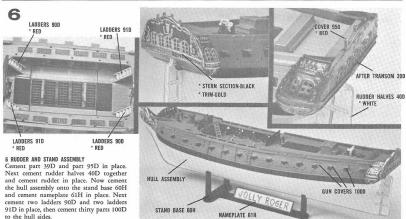


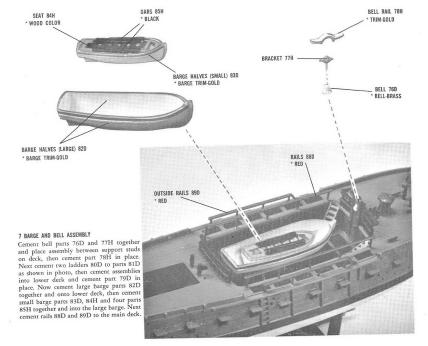


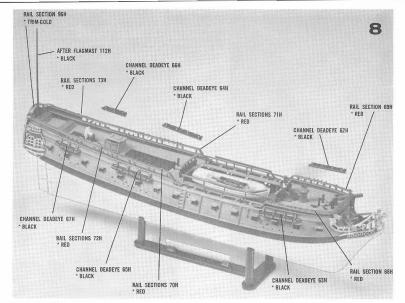

8 RAILS AND CHANNELS


Cement rear rail sections 70H, 71H, 72H and 73H in place, then cement parts 96H and 112H to the stern section. Now cement front rail parts 68H and 69H to the bow section. Next cement parts 62H, 64H and 66H to one side of the hull and cement parts 63H, 65H and 67H to the other side of the hull.

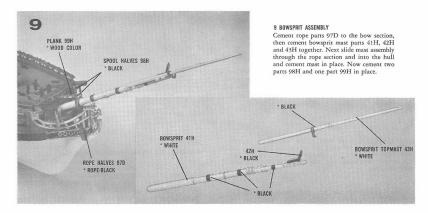

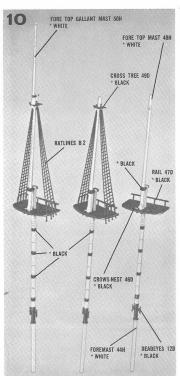

10 FOREMAST ASSEMBLY

Cement two parts 12D and part 46D to mast 44H, then cement part 47D and mast 48H in place. Next insert two ratlines B2 through center hole of 49D and cement this assembly onto mast 48H. Now cement top mast part 50H in place, then cement mast assembly into the deck.

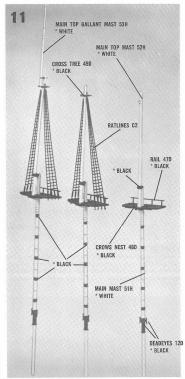

11 MAINMAST ASSEMBLY

Cement two parts 12D and part 46D to mast 51H, then cement part 47D and mast 52H in place. Next insert two ratlines C2 through center hole of 49D and cement this assembly onto mast 52H. Now cement top mast part 53H in place, then cement mast assembly into the deck.

COLOR SCHEME

BLACK.—GUN BARRELS, VARDS, STERN SECTION, BREASTBEAMS, DEADPYES, HATCHES, ANCHOR HOOKS AND RINGS, OARS, STEERING WHEEL SUPPORTS, FLAG-MASTS, CROWNESTS, CROSTREES, CROWSNEST RAILS, MAST LASHINGS, GRAT-INGS, CHANNELS, BAND AROUND HULL, DOOR AND ROOF HINGES, BULLET DEPOT, BOW GRATING SLOW.

RED:—RAILS, INSIDE OF HULL AND GUN COVERS, CAPSTAN, VENTS AND PLATFORM, SUPPORT STUDS, CHICKEN COOP, BELL SUPPORTS, SIDEWALLS AND WALL SECTION, COVER 95D, LADDERS.

BRASS:-BELL.


WOOD COLOR:-SEAT 84H, GUN CARRIAGES ANCHOR STOCKS.


GOLD:—TRANSOM TRIM, FIGUREHEAD, BOW TRIM, LEFT AND RIGHT BOW BREAST-WORK, RAILSECTION 96H, TOP RAIL OF AFTER AND FORWARD BREASTBEAM, TOP EDGE OF SMALL AND LARGE BARGE, BELL RAIL.

WHITE:—BOTTOM OF HULL BELOW BAND, ALL MASTS EXCEPT THE LASHINGS, SMALL AND LARGE BARGE, STEERING WHEEL AND SHAFT, RUDDER.

12 MIZZENMAST ASSEMBLY


Cement two parts 13D and part 55D to mast 54H, then cement part 56D and mast 57H in place. Next insert two ratlines D2 through center hole of 58D and cement this assembly onto mast 57H. Now cement top mast part 59H in place, then cement mast assembly into the deck.

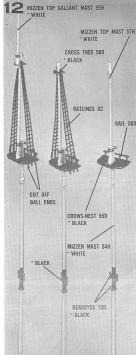

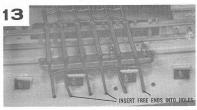

13 RATLINES INSTALLATION

Fasten upper ratlines by hooking ball ends into lower crows-nests. Now fasten lower ratlines by pushing "T" end up through crows-nests and by pulling lower ends over tabs on hull sides and inserting free ends into small holes in hull sides. NOTE: Cut lower ball ends from upper ratlines.

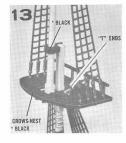



14 YARDS AND SAILS INSTALLATION

Cement sails to yardarms as shown. Use the following yardarms for the following sails:

— cement sail to part 101H, sail 2 to part 102H, sail 5 to part 105H, sail 5 to part 104H, sail 7 to part 105H, sail 10 to part 108H, sail 10 to part 108H, sail 10 to part 107H, sail 11 to part 106H, sail 12 to part 111H and sail 106H in part 109H. Next snap or cement part 110H in place. Now snap or cement yardarms with sails to the masts as shown in the photo. NOTE: To put sails 3-48 and 13 onto the model, first run lines as shown and cement, sails to the masts sails to the mast sails to the mast sails to the sails 3-48 and 13 onto the model, first will have sails 3-80 mm and cement, sails to the sails sail to the sail sails to the sails sails to the sails sails to the sails to the sails sails to the sails sails to the sails sails to the sails to the sails to the sails sails



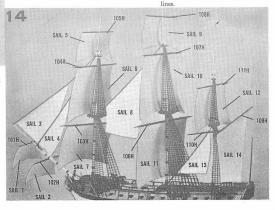

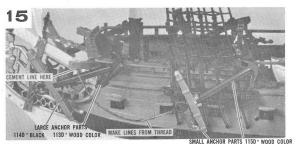

15 ANCHOR ASSEMBLY AND INSTALLATION

Cement large anchor parts 113D and 114D together, then cement smaller anchor parts 115D and 116D together. Next cement anchors to hull as shown in photo. Use 3 or 4 strands of thread to make the anchor ropes (twist thread into one strand).

16 FINAL RIGGING

116D * BLACK

If model is to be rigged, use the thread furnished with kit and follow rigging outline as shown. Use parts 117D for pulley blocks and use parts 118D for line plugs. Wrap lines around parts 118D and cement, then plug parts into holes in hull

